

HOB0[®]

Energy Logger Pro[™]

Data Logger & Modules

User's Guide



DANGER! HIGH VOLTAGE HAZARD!



This logger can be used with sensors that may be installed in an energized electrical enclosure or on an energized conductor. Installation of sensors in an energized electrical enclosure or on an energized conductor can result in severe injury or death. These sensors are for installation by qualified personnel only. To avoid electrical shock, do not install or service these sensors unless you are qualified to do so. Disconnect and lock out all power sources during installation and servicing. Please read the user's manual for instructions and use.

Contact Information

For support, please contact the company that you bought the products from: Onset Computer Corporation or an Onset Authorized Dealer.

Onset Computer Corporation
470 MacArthur Blvd.
Bourne, MA 02532

Mailing Address:
P.O. Box 3450
Pocasset, MA 02559-3450

Phone: 1-800-LOGGERS (1-800-564-4377) or 508-759-9500

Fax: 508-759-9100

Hours of Operation: 8 AM to 5 PM ET, Monday through Friday

E-mail: loggerhelp@onsetcomp.com

Main Onset Web site: www.onsetcomp.com

If you purchased the products through an Onset Authorized Dealer, you can also refer to www.hobohelp.com for support information.

© 2005, 2006 Onset Computer Corporation. All rights reserved.

Part #: MAN-H22
Doc #: 9857-B

Onset, HOB0, HOB0ware, FlexSmart, and Energy Logger Pro are trademarks or registered trademarks of Onset Computer Corporation for its data logger products and configuration/ interface software. Keyspan is a trademark of InnoSys Inc. Duracell is a registered trademark of Duracell. Energizer is a registered trademark of Eveready Battery Company, Inc. All other trademarks are the property of their respective companies.

onset[®]

Part #: MAN-H22
Doc #: 9857-B

Contents

Chapter 1: Introduction.....	6
Overview	6
Key features	7
FlexSmart modules	7
Smart Sensors	8
Logger components	8
Chapter 2: Using the logger	10
Assembling the logger	10
Configuring the modules	12
Launching the logger	13
Checking logger status	14
Stopping the logger	14
Reading out data	15
Recovering data from a logger with dead batteries	15
Chapter 3: Understanding the logger	16
Sensor excitation	16
Modules and sensors	17
Adding and removing modules and sensors	17
Smart Sensors	18
Working with channels	18
Time accuracy	19
Memory	20
Batteries	21
Selecting batteries	21
Battery life	23
Maximizing battery life	24
External power sources	25
External power adapter specifications	25

Chapter 4: Modules	26
Analog (CVIA) module	26
Functional block diagram	26
Using the module	27
Connecting sensors to the module	27
Configuring channels	28
Verifying operation	28
TRMS (TRMSA) module	29
Functional block diagram	29
Using the module	29
Important considerations	29
Connecting sensors to the module	30
Configuring channels	31
Verifying operation	31
Chapter 5: Maintenance	32
General maintenance schedule	32
Inspecting the logger housing and cables	33
Verifying sensor accuracy	33
Cleaning the logger	33
Replacing batteries	33
Verifying logger operation	34
Chapter 6: Diagnostics and troubleshooting	36
Indicator LED behavior	36
Push to Start (Green)	36
Delayed Start (Green)	36
Logging (Green)	37
Memory Low (Red)	37
Battery Low (Red)	37
Sensor Fail (Red)	38
Problems and solutions	38

Chapter 7: Reference 41

 Detailed specifications 41

 Accessories 42

 Warranty..... 44

 Returns..... 45

 Repair Policy 46

 Contacting Technical Support..... 46

 Before calling Technical Support 46

Index 48

Chapter 1:
Introduction

This chapter discusses the following topics:

- ✍ Overview
- ✍ Key features
- ✍ FlexSmart modules
- ✍ Smart Sensors
- ✍ Logger components

Overview

The HOBO Energy Logger Pro is a modular, reconfigurable data logging system used in energy and industrial monitoring applications.

The 15-channel system enables you to quickly and easily perform a broad range of monitoring applications. You can use the HOBO Energy Logger Pro with FlexSmart™ modules, which convert signals from many types of Onset and third-party sensors. You can also use any Smart Sensor that is compatible with the HOBO Weather station or HOBO Micro Station.

Tip: Keep in mind that although some Smart Sensors are intended mainly for outdoor use (for example, the Solar Radiation sensor), the Energy Logger Pro is suitable for indoor use only.

Use HOBOWare® Pro software to configure and communicate with the logger. HOBOWare Pro allows you to customize configuration settings, launch the logger, read out the data, and plot or export the data for analysis.

The Energy Logger Pro package includes:

- HOBO Energy Logger Pro
- Energy Logger Pro User’s Guide
- Eight 1.5V alkaline batteries
- One miniature slotted screwdriver
- Blank label
- Rubber feet

Key features

Flexible expansion - The logger is not preconfigured. You can use up to three FlexSmart modules and up to six Smart Sensors of any type or combination just by plugging them in before logging begins.

Automatic detection of Smart Sensors - The logger automatically recognizes Smart Sensors. No programming, wiring, or calibration is required to set them up.

Digital network - The connections between the Smart Sensors and the logger are digital, ensuring accurate, reliable data collection and storage.

Excitation - The Analog module (S-FS-CVIA) supports optional, user-configurable sensor excitation power and warmup. The logger provides 12 V DC sensor excitation voltage up to 200 mA for transducers that require external power for proper operation. Refer to “Sensor excitation” on p. 16 for details.

Flexible power capabilities - The logger supports multiple battery types (alkaline, enhanced alkaline, or lithium) as well as several types of external power sources to allow for longer deployments while providing increased power for sensor excitation. Refer to “External power sources” on p. 25 for details.

FlexSmart modules

The logger is compatible with two types of FlexSmart modules, which can accommodate up to two sensors each. Up to three FlexSmart modules (in any combination) can be connected to the logger.

The **Analog Module** (S-FS-CVIA) offers configurable excitation power and can be connected to any one or two of the following sensors:

- Kilowatt (kW) Power (T-VER-8044-100)
- Gauge Pressure (T-ASH-G2)
- Differential Air Pressure (T-SET-265)
- Carbon Dioxide/Temperature (TEL-7001)
- Duct-Mount Humidity/Temperature (T-VAI-HMD-40Y)
- Additional third-party sensors via 4-20mA, or 0-20 V DC (including 2.5, 5, 10 V)

The **TRMS Module** (S-FS-TRMSA) can be connected to the following compatible AC current and potential (voltage) transformers:

- AC Current (with 333 mV output) (T-MAG-SCT)
- AC Voltage (with 333 mV output) (T-MAG-SPT)

For detailed information on these modules and sensors, including new modules and sensors that may have been introduced after this manual was printed, refer to the Onset website:


<http://www.onsetcomp.com/solutions/products/energy>

Smart Sensors

The Energy Logger Pro can also accommodate up to six Smart Sensors to monitor temperature, humidity, pressure, current, voltage, pulses, and other properties. Smart Sensors are automatically detected when logging begins, and do not require any configuration.

For detailed information on Smart Sensors, including new sensors that may have been introduced after this manual was printed, refer to the Onset website: <http://www.onsetcomp.com/solutions/products/sensors/smart>

Logger components

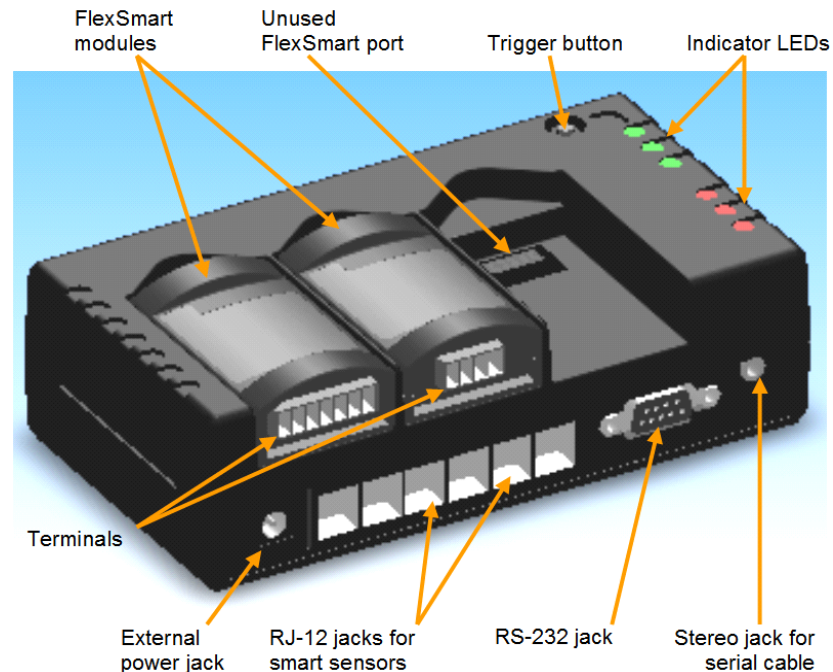

FlexSmart module ports – Up to three FlexSmart modules can be installed on the logger. These can consist of any combination of Analog and TRMS modules. Third-party sensors (available through Onset) are connected to the logger through the terminals on these modules.

Trigger button – Hold down the button for at least two seconds to manually start the logger in the field if the **Trigger** start option was selected in HOBOWare Pro during launch.

Indicator LEDs – There are three green and three red status indicators. The green indicators blink to show status or activity. The red indicators blink to show that battery or memory are low, or that a sensor error has occurred. For more detailed description of the indicators, refer to “Diagnostics and troubleshooting” on page 32.

Stereo jack for serial cable – The serial interface cable is connected to this port to communicate with HOBOWare Pro or the HOBO U-Shuttle.

RS-232 jack – This port allows you to connect the logger via a DB9 connector instead of the stereo jack.

RJ-12 jacks – Any combination of up to six Smart Sensors can be installed on the logger.

External power jack – An optional external power adapter can be connected to this port to power the logger.

Chapter 2: Using the logger

Before deploying the logger, read this chapter thoroughly and follow *all* of the procedures at least once. This will ensure that you are comfortable enough with the logger and with HOBOWare Pro software to get the most out of your deployment. It will also verify that the logger is configured properly.

This chapter discusses the following logger usage topics:

- ✦ Assembly
- ✦ FlexSmart module configuration
- ✦ Launch and other operations

Tip: Many of these steps refer to HOBOWare Pro features and commands. Refer to the *HOBOWare Pro User's Guide* for detailed information about these functions.

Assembling the logger

The HOBO Energy Logger Pro is shipped partially assembled. You will need the following items to prepare the logger for use:


- Eight 1.5V Alkaline Batteries and small Phillips head screwdriver (for battery door); or external power source
- At least one of the following:
 - FlexSmart modules with third-party sensors and miniature slotted screwdriver
 - Smart Sensors
- Serial interface cable (plus USB serial adapter if your computer does not have a serial port)
- Computer running HOBOWare Pro version 2.1.1 or greater

To set up the logger, take the following steps:

1. **Insert the batteries or connect external power source.** To install batteries, use a Phillips head screwdriver to loosen the screw on the back of the battery compartment door. Remove the door. Install eight fresh 1.5 V batteries, being careful to match the polarity marked in the battery compartment. (Refer to “Selecting batteries” on p. 21 for tips on selecting the right battery type for your application.) Replace the battery compartment door and tighten the screw to secure it. **Do not over-tighten the screw.**

To use an external power source, plug the power adapter into an electrical outlet or other power source, then plug the power adapter into the external power jack.

2. **Install FlexSmart modules (if applicable).** Remove the protective cap from the module connector on the logger. Align the connector on the back of the FlexSmart module with the connector on the logger, and gently press the module into place.

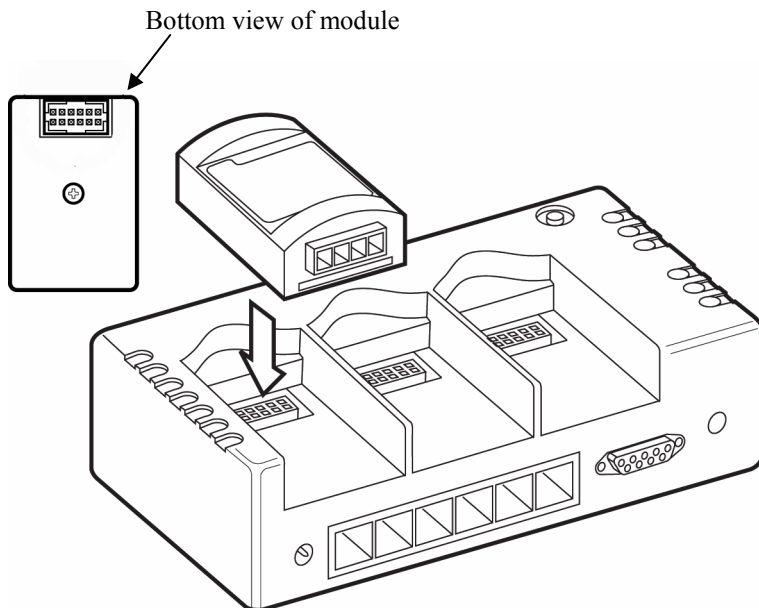

You can install up to three FlexSmart modules on the logger. Modules may be plugged into any slot in any combination.

3. **Attach the third-party sensors to the modules (if applicable).** For information on installing the third-party sensors, refer to “Modules” on p. 26 and the instructions that came with the sensor.
4. **Connect the Smart Sensors (if applicable).** Plug up to six Smart Sensors into the RJ-12 modular jacks, or use splitters to install more than six. (Keep in mind that some Smart Sensors have more than one sensor channel.) The logger supports up to 15 sensor channels, plus the logger’s own battery channel (if selected for logging).
5. **Connect to the host computer.** Use the serial interface cable (part # CABLE-PC-3.5) to connect the logger to a computer running HOBOWare Pro. If your computer does not have a serial port, you can use a Keyspan™ USB serial adapter (part # CABLE-USB232) to connect the logger to a USB port on your computer.
6. **Access the Launch window in HOBOWare Pro.** In the Launch window, you should see a list of all the Smart Sensors and FlexSmart modules you connected to the logger.

Configuring the modules

While Smart Sensors are designed and preconfigured for specific purposes, FlexSmart modules are user-configurable to accommodate a wide range of Onset and third-party sensors. To take advantage of this adaptability, HOBOWare Pro lets you configure these modules at launch time, or create and save different configurations to be loaded into the modules whenever needed.

If you connected only Smart Sensors, skip ahead to the next topic, “Launching the logger.”

1. **Access the Configure Channel dialog in HOBOWare Pro.** From the Launch window in HOBOWare, double-click a module name to expand it, then select a module channel and click **Configure**.
2. **Load an existing configuration, if available.** HOBOWare Pro may already have a default configuration for your sensor. Click the **Load** button to select an existing configuration for the sensor.
3. **Review the loaded configuration, or create a new one.** The Configure Channel dialog allows you to create or change the channel name, scaling parameters, and other items. (Refer to the *HOBOWare Pro User’s Guide* for details.)

4. **Review or set excitation power, if applicable.** If this is an Analog module, make sure that the excitation power settings are correct for the intended sensor.
5. **Save the new or changed configuration.** Skip this step if you are using a default configuration without any changes.
6. **Click Configure to complete the configuration.** Repeat these steps for each channel of each module.

Launching the logger

Once all Smart Sensors have been connected and FlexSmart modules have been configured, access the Launch window in HOBOWare Pro and take the following steps:

1. **Select the correct battery type (alkaline or lithium).** If the battery type is not set correctly, the batteries will not report their power accurately.
2. **Review the list of channels.** Make sure all of your sensors and modules are listed in the Launch window in HOBOWare Pro. The FlexSmart modules and Smart Sensors are listed in ascending order by serial number. If more than 15 data channels are connected, the devices with the higher serial numbers will be ignored and their data will not be recorded. The logger can only record 15 data channels at a time.
3. **Log battery voltage?** If you are using excitation power, you should also log the battery voltage. This channel does not count towards the 15-channel limit.
4. **Wrap?** The Energy Logger Pro will stop logging when its memory is full, or you can enable wrapping. With wrapping enabled, when the logger's memory fills up, the newest measurements will overwrite the oldest measurements.
5. **Review other launch settings.** Select logging and sampling intervals, and indicate whether you want to begin logging now, wait for a timed delay, or a trigger start. Refer to the *HOBOWare Pro User's Guide* for more information about these settings.
6. **Click Launch.** Depending on the option you select, the logger may start automatically (either immediately or at a specified time), or you may start it manually by pressing the **Push to Start** button on the logger.

Checking logger status

You can verify logger status by looking at the indicator lights on the logger. The LEDs blink to let you know if the logger is waiting for a delayed or button start, or if the logger is already logging. Other LEDs blink to warn you when battery power or memory is running low, or if there is a sensor error. Refer to “Indicator LED behavior” on p. 36 for details.

You can get more detailed information about battery power, sensor readings, and memory in HOBOWare Pro at any time, whether the logger is logging or not. Refer to the *HOBOWare Pro User's Guide* for details about the Status window.

Tip: In HOBOWare Pro, battery capacity is reported differently depending on the type of batteries being used. For alkaline batteries, the status is displayed as a percentage of the capacity remaining.

For lithium batteries, capacity is listed as “Good” for 25-100% capacity remaining, or “Empty” for 25% or less capacity remaining. This is necessary because lithium battery voltage does not vary much until the batteries are nearly depleted. Because of the uncertainty in capacity, you may wish to start each deployment with fresh lithium batteries that you know are at 100%, rather than rely on old ones.

Stopping the logger

If wrap is not enabled, the logger automatically stops recording data when the memory is full. You can also stop the logger manually at any time by using the **Stop** command in HOBOWare Pro.

Once the logger has stopped, the data remains in the logger until the next launch.

Reading out data

Use HOBOWare Pro to read out data from the logger. Reading out copies data from the logger to your computer, allowing you to save the data in a .dtf file and view the plot.

You can read out while the logger is recording data, or after the logger has been stopped. Refer to the *HOBOWare Pro User's Guide* for details about reading out, saving, and displaying data.

Recovering data from a logger with dead batteries

The logger uses very durable, high-capacity Flash memory. With this memory, data is retained even when the batteries are dead or removed.

If the logger stops recording data because the batteries are dead, you can recover the data that has been recorded. Simply replace the batteries as described in “Replacing batteries” on p. 33. Then read out the data from the logger as usual.

Important: *Do not relaunch the logger until the data has been recovered. If, after changing the batteries, you are still unable to read out your logger, contact the vendor that sold it to you. It may be possible to retrieve the logged data.*

Chapter 3: Understanding the logger

This chapter discusses the following topics in depth:

- ✍ Sensor excitation
- ✍ Modules and sensors
- ✍ Time accuracy
- ✍ Batteries
- ✍ Memory

Sensor excitation

Sensor excitation is a voltage output provided by the logger to power a sensor that is connected to it. This power may be needed because the sensor is not self-powered, or because the sensor's power capacity cannot support a long deployment.

When sensor excitation is required, the logger can provide 12 V DC sensor excitation voltage up to 200 mA total for transducers that require external power for proper operation. The excitation voltage has a programmable warmup time and is controlled by the FlexSmart Analog module. Excitation is controlled on a per-module basis.

Excitation power can drastically reduce logger battery life. If your sensor does not require it, you should not include it in the channel configuration. If you do need to use it, carefully select the sensor excitation mode that best meets your needs. Two modes are available:

- **Warmup mode** – The logger supplies excitation power for a brief, user-programmable period prior to each measurement. This mode allows you to select the minimum warmup time needed to allow for sensor stabilization, while conserving the logger's battery power. For example, if you specify a **Warm Up** of one second and set the **Logging Interval** in the logger to one minute, the logger will power the external sensor for one second, log a measurement, and then turn off the excitation power for the next 59 seconds. The warmup time can be up to 120 seconds.

Tip: If the warmup time selected is greater than the logging interval selected, the logger will interpret the excitation mode as continuous.

- **Continuous mode** – The logger supplies constant excitation power to the sensor for the entire duration of the deployment. This mode will result in the shortest battery life. Continuous mode is required if the sensor needs more than two minutes of warmup time. If you need to provide continuous excitation to a sensor, you should consider backing up your batteries with an external power source. Refer to “External power sources” on p. 25 for details.

Important: When using excitation power, always enable the logger’s internal battery channel at launch. If the battery becomes too low to provide excitation power, excitation power is turned off, but logging continues as long as the battery can power the logger. This will cause the further readings on that channel to become inaccurate. If you are logging the internal battery channel when this happens, an “Excitation Off” event will be shown in your datafile to mark the point at which excitation power was disabled. (If you do not log the internal battery channel, you will not have anything in your datafile to identify the point beyond which the data might be inaccurate.)

Modules and sensors

This topic gives some guidelines for working with modules and sensors.

Adding and removing modules and sensors

Whenever possible, it is best to add and remove modules and sensors between deployments – after stopping the logger and reading out data, but before relaunching. However, circumstances may require that you add or remove a module or sensor at some other time.

If you **add** a module or sensor while the logger is recording data, the module or sensor will be ignored. Logging will continue normally for the other channels.

You may attach modules and sensors at the following times:

- Any time between deployments, when the logger is stopped.
- While you are configuring the launch parameters in HOBOWare Pro. Click **Refresh** to update the **Logging Duration** and see the new module or sensor added to the list of sensors.
- After you have launched the logger, but before logging has begun (i.e. when the logger is waiting for a delayed or button start). Note

that adding modules or sensors will cause the logging duration to be shorter than the duration that was displayed in the Launch window.

If you **remove** a module or sensor while the logger is logging, the **Sensor Fail** indicator will blink when the next logging interval is reached, and the logger will record erroneous data for that channel. This is true even if you immediately connect another sensor of the same type in the same port. If you want to change sensors – even sensors of the same type – you must stop the logger, read it out, swap the sensors, and then relaunch.

Smart Sensors

The logger can work with a maximum total of Smart Sensor cable lengths up to 100 meters (328 feet), as measured from the logger connection point to the electronics embedded in the individual cables. Optional Smart Sensor extension cable lengths must also be included in the total.

This limitation applies to Smart Sensor cables only. The lengths of other cables, such as those connected to FlexSmart modules, do not need to be included in this total.

Working with channels

The Energy Logger Pro can log up to 15 data channels (not including the internal battery channel). This includes all FlexSmart module channels, plus each of the Smart Sensor channels (note that some Smart Sensors may have more than one channel). If you have more than 15 channels connected, some of the sensors will be ignored. You should remove any Smart Sensors that will not be used in the deployment, and disable any module channels that are not needed.


- FlexSmart modules have two channels. If you want to log only one channel, you can disable the unused channel on the Launch window in HOBOWare Pro. Refer to the *HOBOWare Pro User’s Guide* for details.
- If you connect a Smart Sensor that has multiple channels (such as temperature and relative humidity), all of its channels will be logged. There is no way to disable them.

Time accuracy

When you launch the logger, the logger's clock is set by the host computer's time and time zone offset from UTC. (UTC, or Coordinated Universal Time, is similar to Greenwich Mean Time.) The time zone offset makes it possible to determine objective, non-local time. This prevents conflicts and confusion when you relaunch a logger with a shuttle that may have been launched in a different time zone, or before a Spring or Fall time change.

However, there are three common sources of errors with time reporting.

- **Host clock error.** The most likely source of error is an incorrect time, or time zone setting, on the computer that launched the logger. Make sure the clock on your computer is set to the correct date and time before launching the logger. One accurate resource is <http://www.nist.time.gov>.
- **Launch time loss.** The logger may lose up to two seconds when it is launched. This is unavoidable.
- **Clock drift.** The logger's long-term time accuracy is related to ambient temperature. At 25°C (77°F), the worst-case error is ± 8 parts per million (PPM), or about 5 seconds per week. The error increases as the temperature deviates from 25°C, as shown in the graph below. At a constant temperature of -20°C, the logger time error could be as much as 35 PPM (21 seconds per week).

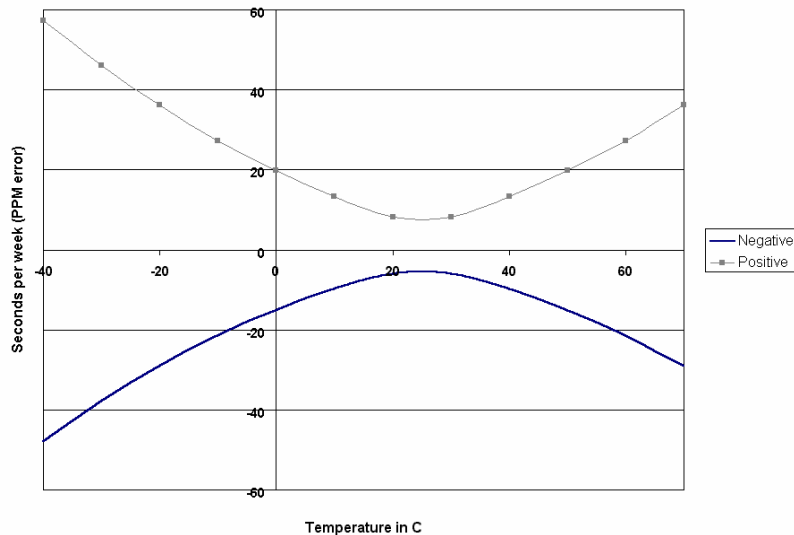

To reset the logger's clock:

1. Exit HOB0ware Pro and correct the computer's clock. Then restart HOB0ware Pro.
2. Read out the logger, if you have not done so already.
3. Relaunch the logger.

Memory

The logger contains 512K bytes of very durable, high-capacity, non-volatile Flash memory, which stores data even if power runs out. This allows for data retention even when the batteries become depleted or are removed.

Up to 10K of this memory is used to store the launch configuration and deployment notes, leaving at least 502K bytes for data storage. HOB0ware Pro automatically estimates how long the logger will record data before the memory fills up, based on the logging interval and the number and type of sensors connected. This is called the **logging duration**.

Adding sensors or logging the internal battery channel decreases the logging duration; increasing the logging interval increases the logging duration.

For most applications, it is battery life, not memory capacity, that limits the logging duration. The following table shows the expected run time for several logging intervals based on the total number of bits in place, which is determined by adding together the bits per sample for each sensor measurement parameter in your system. For example, a HOB0 Energy Logger Pro with the following sensors is using 56 total bits.

Sensor	Bits per Sample		Total bits	
1 temperature sensor	X	8	=	8
1 wind speed sensor	X	16	=	16
2 temperature sensors	X	16	=	32
Total number of bits				56

At a logging interval of 5 minutes, the logging duration for a logger using 56 bits would be approximately 250 days. (Refer to the sensor manual to determine the number of bits each type of sensor uses.)

Batteries

The HOBO Energy Logger Pro requires eight 1.5V AA batteries. The logger is shipped with eight alkaline batteries, and is also compatible with enhanced alkaline batteries and lithium batteries (Li/FeS₂).

Selecting batteries

Onset recommends alkaline batteries for most applications because they are inexpensive, can provide more accurate battery status readings in HOBOWare Pro, and last longer than similar lithium batteries at moderate temperatures.

However, some applications or environments are better suited to other types of batteries. Refer to the following table to determine which type of battery you should use.

Battery type	Considerations for use
Alkaline	<p>These are best for most applications at moderate temperatures.</p> <p>Alkaline batteries also work in temperatures ranging from 40° to 50°C (104° to 122°F) and from -20° to 0°C (-4° to 32°F), but may not perform as well as lithium batteries at these temperatures.</p> <p>At temperatures lower than -20°C (-4° F) and higher than 50°C (122°F), alkaline batteries are not suitable. Use lithium batteries instead.</p>
Enhanced alkaline (such as Energizer® E2 or Duracell® Ultra)	<p>Consider these for applications with higher sensor excitation requirements and moderate temperatures.</p> <p>These batteries are specifically designed for high-current use. For low-current applications, however, they offer little improvement.</p>

Battery type	Considerations for use
Lithium (Li/FeS ₂)	<p>Lithium batteries last longer than alkaline batteries in applications with extreme or varying temperatures (below 0°C/32°F or above 40°C/104°F). They also outperform alkalines in deployments with high sensor excitation currents (>100 mA) or long warmup times.</p> <p>Lithium battery voltage does not vary much until the batteries are nearly depleted. Because of the uncertainty in capacity, you may wish to start each deployment with fresh lithium batteries that you know are at 100%, rather than rely on old ones.</p>

Important: Do not use any other type of battery, such as carbon zinc (“heavy duty”) or rechargeables. These batteries will not perform well and will not report their battery status accurately in HOBOWare Pro.




WARNING: Fire, Explosion, and Severe Burn Hazard. Do not mix battery types, either by chemistry or age; batteries may rupture or explode. When replacing the batteries, read and follow their disposal instructions; dispose of lithium batteries according to local regulations. Do not dispose of batteries in fire. Never attempt to recharge a lithium or alkaline battery. Do not heat the batteries above 185°F (85°C). Do not mutilate or rupture the battery housing. Lithium batteries may explode if the logger is exposed to extreme heat or conditions that could damage or destroy the battery case. Do not expose the contents of the battery to water.

Battery life

Battery life will vary with the following factors:

- Sensor excitation current and warmup time (most important factor)
- Logging interval (and sampling interval, if applicable) selected
- Number of sensors being used
- Battery type
- Operating environment (e.g., temperature)

The following graph can help you estimate how long batteries will last (the run time) at different logging intervals and excitation currents with a warmup time of 30 seconds.

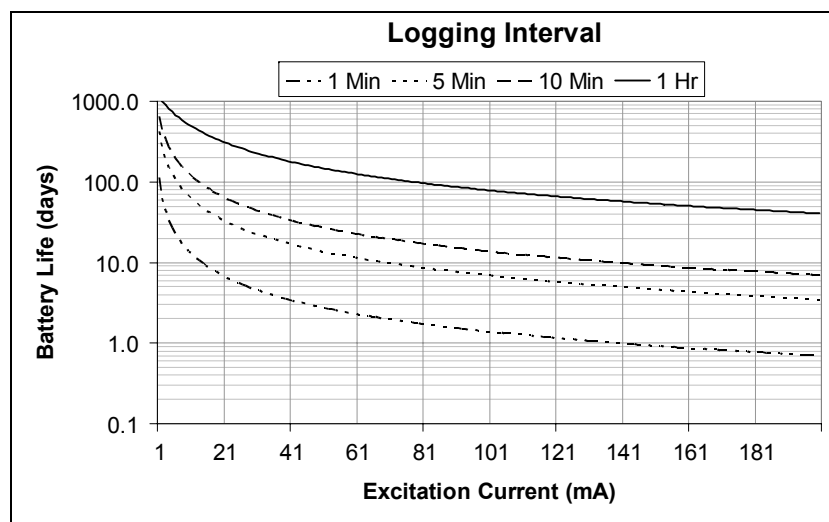

Note: This graph assumes that standard alkaline batteries and three FlexSmart modules are being used.

This graph was generated from a spreadsheet that can estimate battery life for varying parameters. Contact Onset Technical Support for more information.

Maximizing battery life

- Batteries are inexpensive compared to the cost of a new logger or a missed logging opportunity. If you suspect that batteries are damaged or run down, replace them immediately to prevent leakage or logger malfunction.
- When launching the logger in HOBOWare Pro, do not set a **Sampling Interval** unless you have sensors that support measurement averaging. Only the following Smart Sensors and input adapters support measurement averaging:
 - 12-bit Temperature S-TMB-M0XX
 - 12-bit 4-20 mA Input Adapter (S-CIA-CM14)
 - 12-bit Voltage Input Adapter (S-VIA-CM14)
 - Photosynthetically Active Radiation (PAR) S-LIA-M003
 - Silicon Pyranometer (Solar Radiation) S-LIB-M003

Tip: Keep in mind that although some Smart Sensors are intended mainly for outdoor use (for example, the PAR and Solar Radiation sensors), the Energy Logger Pro is suitable for indoor use only.

- If you are using excitation voltage, select the shortest warmup time needed for the sensor.
- Verify that the batteries' "Use Before" date is at least two years from the current date.
- Alkaline batteries will lose up to 10% of capacity per year if they are sitting on a hot shelf. They can lose 50% or more of their capacity if exposed to heat repeatedly (for example, stored on a car dashboard). Keeping batteries in the refrigerator can reduce self-discharge to 1 to 2% per year, but you must prevent condensation from forming on the batteries.
- Use new batteries if you expect the deployment to require a substantial portion of battery life.

External power sources

An external power source can reduce or eliminate the need for internal batteries in applications that have readily available AC power, or require more current and/or longer deployments than the logger's internal batteries can support. The logger can operate on a DC input voltage from several external sources including:

- Standard 12 V automotive/motorcycle type battery
- Sealed lead-acid (SLA) type 12 V battery (used in uninterruptible power supplies and emergency lighting systems)
- External alkaline/lithium battery packs
- Optional AC power adapter (Onset part # P-AC-1)

There are two ways you can use an external power source:

- **Battery eliminator mode** - In place of the internal batteries. In this mode, the logger can operate on a DC input voltage ranging 8 V – 15 V.
- **Battery backup mode** - To conserve the internal batteries as an automatic back-up supply if the external supply should fail, similar to an uninterruptible power supply. To do this, you must provide a DC input voltage **greater than** that of the internal batteries. Thus, a DC input voltage of 13.6 V – 15 V is required for proper operation.

External power adapter specifications

- Able to deliver 750mA
- Positive outer sleeve
- 2.1 mm center pin diameter
- 5.5 mm outer sleeve diameter
- 10 mm outer sleeve length

Chapter 4: Modules

This chapter discusses the following FlexSmart modules:

- ✓ Analog (CVIA) module
- ✓ TRMS module


Analog (CVIA) module

The Analog module (S-FS-CVIA) is an easy-to-configure, flexible DC signal-conditioning module for the HOBO Energy Logger Pro. This two-channel module can accept (and provide excitation power to) a wide range of Onset and third-party sensors with 0-20 V or 0-20 mA output, including devices with 4-20 mA current loop interface, and sensors with 0-2.5, 0-5, and 0-10 V DC output.

The Analog module features input protection and signal filtering, as well as delta-sigma A/D conversion and factory calibration. This module features extremely low-power operation, resulting in long battery life for unattended data logging applications. Precision electronics provide $\pm 0.25\%$ accuracy from 50 mV to full scale (FS).

Sensors connected to this Analog module can be configured in HOBOWare Pro software. Configuration options include channel names, scaling parameters, and excitation power. Sensors are connected to the module via a seven-pin Phoenix-style detachable screw terminal connector.

Functional block diagram

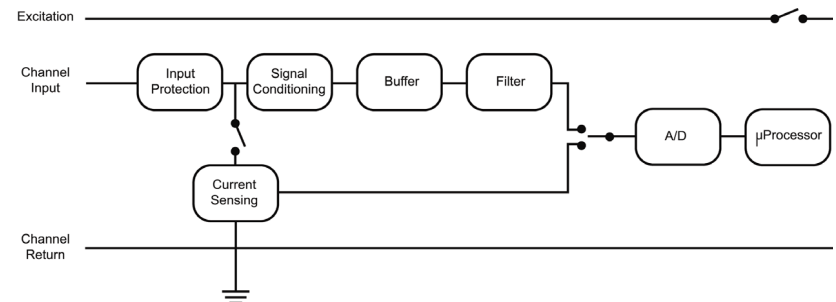

Using the module

Set up the Analog module as described below. When logging begins, the logger will acquire and store measurements from the sensors attached to the module.


Connecting sensors to the module

Insert the Phoenix-style screw terminal connector into the connector on the end of the module.

Tip: The Analog module is a single-ended device. Pins 3 and 7 are connected to signal ground and to each other.

Refer to the sensor documentation for terminal connection details and use the pinout diagram below to connect a two- or three-wire sensor or transducer to the module's terminals. To make the connection, loosen the screw for each pin on the connector, insert the appropriate wire, and tighten the screw.

The following example illustrates typical connections for a voltage sensor, and a current sensor that requires excitation:

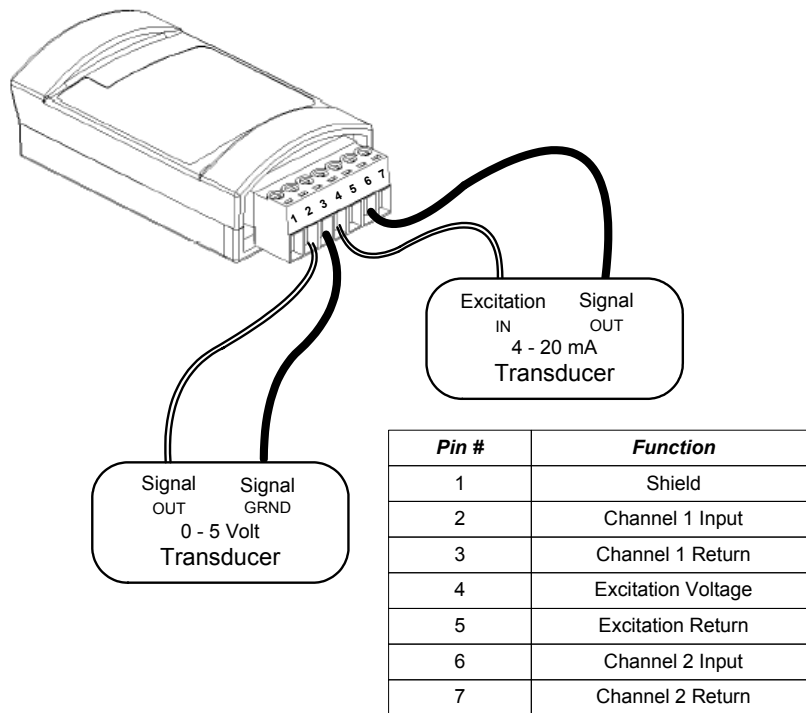

Tip: Always refer to your sensor documentation for terminal connection details.

Once the sensors are connected, install the Analog module into any of the three module slots on the logger. For more information, refer to “Assembling the logger” on p. 10.

Use the provided label to identify a module/sensor combination to aid in determining sensor placement and cable routing when in the field.

Configuring channels

Each channel of the Analog module is individually configurable to accept a wide range of sensors. That means that each channel can be configured to measure either current or voltage, and the collected data can be scaled to produce meaningful results that are consistent with the properties being measured.

Use HOBOWare Pro to configure each channel at launch time, or create and save different configurations to be loaded into the modules whenever needed. A channel configuration consists of a channel name, measured property name, scaling parameters, and excitation information, if applicable. Refer to the *HOBOWare Pro User's Guide* for details.

Verifying operation

The Analog module begins functioning when logging begins. When the module is functioning correctly, the **Active** indicator on the module blinks once per logging interval for each configured channel to indicate that a successful measurement has been made.

TRMS (TRMSA) module

The TRMS (true root mean square) module (S-FS-TRMSA) is a configurable, two-channel input measurement module for the HOBO Energy Logger Pro. It has an input range of 512 mV RMS full scale, making it fully compatible with industry-standard current and potential (voltage) transformers (CT and PT), which output 333 mV RMS full scale.


The TRMS module features extremely low-power operation, resulting in long battery life for unattended data logging applications.

Sensors connected to the TRMS module can be configured in HOBOWare Pro software. Configuration options include channel names and scaling parameters. Sensors are connected to the module via a four-pin Phoenix-style detachable screw terminal connector.



CAUTION: This device *requires* the use of CTs that incorporate internal burden resistors. Do *not* use with unburdened CTs!

Functional block diagram

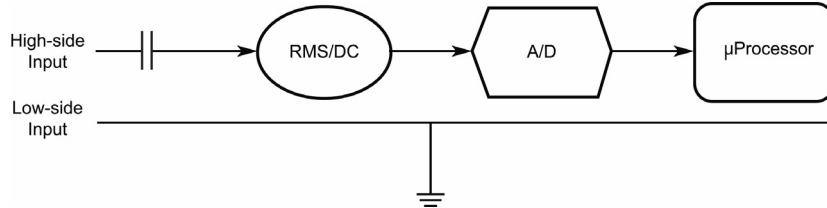

Using the module

Set up the TRMS module as described below. When logging begins, the logger will acquire and store measurements from the sensors attached to the module.

Important considerations

The input to the TRMS module is AC coupled. Moreover, the AC coupling capacitor effectively blocks any DC component, and the RMS converter detects a waveform where the volt-sec area above ground equals the volt-sec area below ground. This can cause seemingly incorrect readings when signals such as full-wave or half-wave rectified sine waves are applied to the inputs.

The TRMS Module is based on a unique delta-sigma RMS-to-DC converter, allowing accurate measurements of waveforms with crest factors up to 4 without user calibration. However, due to the nature of the delta-sigma RMS conversion, input voltages near zero result in unstable output voltages. Therefore, the TRMS module will truncate input signals below 5 mV to zero.

Finally, when using inputs with high crest factor, it is important not to violate the maximum ± 1 V input. For example, a 300 mV RMS signal is

limited to crest factors under 3.3: $\frac{1\text{ V}}{0.3\text{ V}} \approx 3.3$


Connecting sensors to the module

Insert the Phoenix-style screw terminal connector into the connector on the end of the module.

Tip: The TRMS module is a single-ended device. Pins 2 and 4 are connected to signal ground and to each other.

Refer to the sensor documentation for terminal connection details and use the pinout diagram below to connect a two-wire sensor or transducer to the module's terminals. To make the connection, loosen the screw for each pin on the connector, insert the appropriate wire, and tighten the screw.

The following example illustrates typical connections for two transformers:

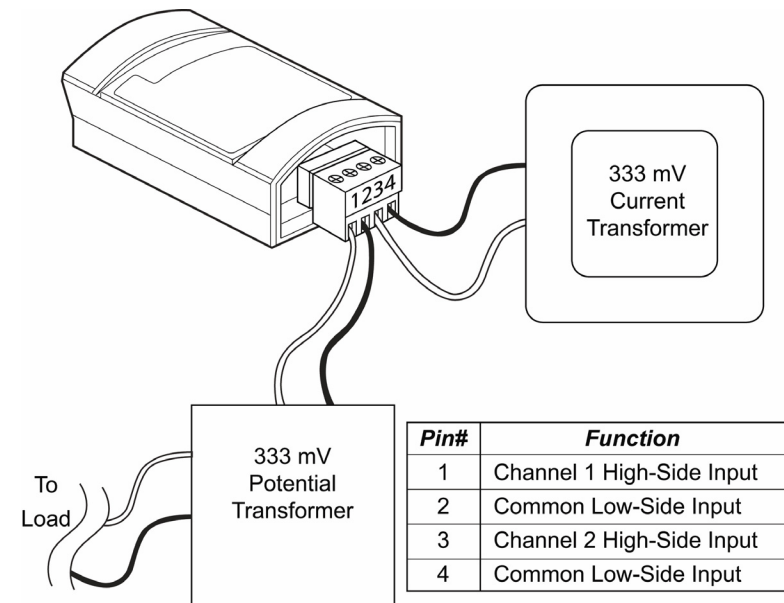

Tip: Always refer to your sensor documentation for terminal connection details.

Once the sensors are connected, install the TRMS module into any of the three module slots on the logger. For more information, refer to “Assembling the logger” on p. 10.

Use the provided label to identify a module/sensor combination to aid in determining sensor placement and cable routing when in the field.

Configuring channels

Each channel of the TRMS module is individually configurable to accept a wide range of sensors. That means that each channel can be configured to measure either current or voltage, and the collected data can be scaled to produce meaningful results that are consistent with the properties being measured.

Use HOBOWare Pro to configure each channel at launch time, or create and save different configurations to be loaded into the modules whenever needed. A channel configuration consists of a channel name, measured property name, and scaling parameters. Refer to the *HOBOWare Pro User's Guide* for details.

Verifying operation

The TRMS module begins functioning when logging begins. When the module is functioning correctly, the **Active** indicator on the module blinks once per logging interval for each configured channel to indicate that a successful measurement has been made.

Tip: If you will be logging on both of the TRMS module's channels, you must use a logging interval of **two seconds or greater**. If you will be logging on only one channel per TRMS module, a one-second logging interval can be used.

Chapter 5: Maintenance

This chapter describes general maintenance activities for the HOBOWare Energy Logger Pro. This chapter discusses the following maintenance topics:

- ✍ Schedule
- ✍ Tasks

General maintenance schedule

Regular maintenance of the logger is essential to ensure the accuracy of recorded measurements. The logger is primarily intended for indoor use. It can be damaged by many environmental conditions, such as moisture, airborne contaminants, vibration, and tampering. Performing regular maintenance checks allow you to:

- Verify that the logger is logging data and functioning as you expect
- Identify damage
- Minimize the impact of any existing damage

The following table lists maintenance activities and how often they should be performed:

Activity	Frequency
Inspect logger housing and cables	Each use.
Verify sensor accuracy	Refer to the sensor manufacturer's manual for information on how often to verify sensor accuracy.
Clean the logger	As needed.
Replace the batteries	At least once a year, or before any deployment that requires many sensors, excitation, etc. or is scheduled for an extended deployment.
Verify logger operation	Before each deployment.

Inspecting the logger housing and cables

Periodically perform a visual inspection of the logger. Verify that the logger housing is free of visible damage, such as cracks, and that it is clean.

Also ensure that cables and wires are free of damage, such as cracks, cuts, and splits; are fastened securely, free of corrosion and in good condition.

Verifying sensor accuracy

Onset recommends that you test most Smart Sensor accuracies once a year. For details on verifying sensor accuracy, refer to the documentation included with each sensor. For third-party sensors (even those supplied by Onset), refer to documentation provided by manufacturer.

For a fee, Onset can verify the accuracy of any sensor. It may be possible to recalibrate some sensors. Contact Onset Technical Support for details.

Cleaning the logger

The logger does not require specialized cleaning; however, if it is deployed in a dusty or grimy location, you should wipe it down with a damp cloth occasionally. This will prevent dirt from interfering with sensors.


Replacing batteries

Fresh batteries are cheap insurance for extended deployments or high-draw applications when using an external power source is not feasible.

- Before replacing batteries, always read out the logger to prevent data loss.
- Replace batteries at least once a year to prevent loss of data.
- Replace batteries more often if you are using sensor excitation.

To replace batteries:

1. Select the type of batteries you will use and obtain eight fresh, new batteries of the same type. For more information on selecting the type of batteries to use for your application, refer to “Selecting batteries” on page 21.
2. Using a Phillips head screwdriver, loosen the screw on the back of the battery compartment door. Remove the door.

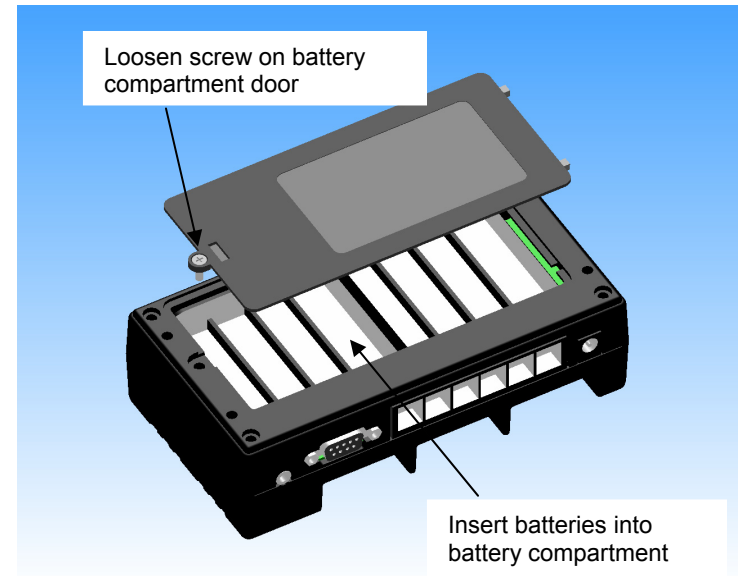

3. Remove the used batteries and dispose of them properly.
4. Install eight new 1.5 V AA batteries, using care to match the polarity marked in the battery compartment. **Do not mix battery types.**
5. Position the battery compartment door in place and tighten the screw to secure it. **Do not over-tighten the screw.**

Verifying logger operation

It is a good idea to quickly test the logger before each deployment, especially if the logger has been stored unused for a long period. To test the logger, take the following steps:

1. Set up the logger (attach sensors, etc.) and start HOBOWare Pro.
2. Access the Launch window and verify that HOBOWare Pro detects all of the connected modules and sensors.
3. Enter a logging interval of a few seconds so that your test will yield enough data to look at, and select the logger's internal battery channel. Make sure the logger is configured to start logging immediately upon launch.

Important: If you are using both channels of a TRMS module, you must select a minimum 2-second logging interval. If all TRMS

modules are configured for single-channel use, you can use a 1-second logging interval.

4. If you are using sensor excitation, configure it for each FlexSmart Analog module channel. Sensors purchased from Onset include sensor connection instructions, including warmup time (if required). For sensors not supplied by Onset, consult the sensor manufacturer's datasheet for warmup time requirements.
 - Many sensors specifications assume that the sensor will be powered continuously, but may be capable of switched operation to conserve battery life. You may need to experiment to determine the best warmup time for rated transducer accuracy.
 - The Energy Logger Pro disables excitation when the battery pack voltage falls to approximately 6.8V (0.85 volts per cell). The batteries are essentially dead at this point and should be changed. The logger will continue to log, but data for channels using excitation will be invalid.
5. Click **Launch** to start the logger.
6. After a couple of minutes, read out the logger. (Answer **Yes** when prompted to stop the logger.)
7. Make sure the data appears normal for all sensors.

Chapter 6:

Diagnostics and troubleshooting

This chapter lists some symptoms and tips to help you confirm correct operation of your logger, and help you diagnose possible problems. It discusses the following diagnostic and troubleshooting topics:

- ✍ Indicator LED behavior
- ✍ Testing the logger
- ✍ Problems and solutions

Indicator LED behavior

The indicator LEDs can provide helpful clues as to what the logger is doing, especially when it is not behaving as expected.

Tip: The indicators are very faint under direct sunlight or bright fluorescent lighting. If no indicators appear to be blinking, shield the logger from the light and check the indicators again.

Push to Start (Green)

If you have launched the logger with the **Trigger** start option, this indicator will continue blinking and will not record any measurements until you press and hold the **Push to Start** button on the logger for at least two seconds. You can add and remove Smart Sensors and FlexSmart modules while this indicator is blinking.

Delayed Start (Green)

If you have launched the logger with an **At Interval** or **Delayed** start option, the indicator will continue blinking and the logger will not record measurements until the defined start date/time. You can add and remove Smart Sensors and FlexSmart modules while this indicator is blinking.

Logging (Green)

This indicator blinks every two seconds while the logger is recording data from sensors. Sensors must not be added while this indicator is blinking.

If this indicator is not blinking when you believe it should, make sure the logger has been launched. If you configured the logger to launch with a delayed or interval start, check the date and time you selected and make sure the **Delayed Start** indicator is blinking. If you configured the logger to launch with the **Trigger** start option, press and hold the **Push to Start** button on the logger until all the indicators flash at once (at least two seconds).

Memory Low (Red)

If the logger was launched with wrapping disabled, this indicator blinks when less than 25% of memory remains for saving data. The logger will continue to run until all memory is used.

If the logger was launched with wrapping enabled, this indicator should not blink.

Battery Low (Red)

This indicator blinks when battery power is at less than 25% capacity, or if the batteries are installed improperly. The logger will continue logging until the batteries are dead; however, you should read out the data and replace the batteries as soon as possible, before the batteries die, and then relaunch the logger. Or, attach an external power source if possible.

If this indicator continues to blink even after you have replaced the batteries:

- Check that the batteries are installed properly. If the polarity of any of the batteries is incorrect, this indicator will blink.
- Make sure you are using the correct battery type. The logger uses eight 1.5 volt AA alkaline or lithium batteries. The battery type must be specified correctly on the Launch Logger dialog for the correct battery status to be reported.
- Make sure all batteries are of the same type - either all alkaline, all enhanced alkaline, or all lithium. Never mix battery types.
- Check the battery expiration date. Verify that the expiration date is at least two years from the current date. Batteries can lose significant capacity if stored at elevated temperatures.

- Check the voltage of the batteries with a voltmeter. Alkaline batteries should be at least 1.5 V per cell when new; fresh lithium batteries should be 1.6 V per cell.

Sensor Fail (Red)

This indicator blinks when there is or has been a FlexSmart module or Smart Sensor communication failure.

Tip: If the **Sensor Fail** indicator is blinking, you should read out the logger, investigate the problem, and then relaunch the logger.

- If the **Sensor Fail** indicator is blinking in conjunction with the **Logging** indicator, there was a communication failure, but the system has recovered. There may be an intermittent problem. Try checking the FlexSmart modules and Smart Sensors one at a time to make sure they are all communicating. If you find a bad module or sensor, or if no module or sensor communicates, contact your Onset Authorized Dealer or Onset Technical Support.
- If the **Sensor Fail** indicator is the only one that is blinking, at least one FlexSmart module or Smart Sensor is currently not communicating. You should investigate this problem immediately. Look for a loose connection, which could cause bad electrical contact with a module or sensor. If found, remove the offending module or sensor and check its wires and connector for damage and/or signs of moisture.

Problems and solutions

Problem	Solution
No status indicators are blinking	<p>The indicators are very faint under direct sunlight or bright fluorescent lighting. If no indicators appear to be blinking, shield the logger from the light and check the indicators again.</p> <p>Check the status in HOBOWare Pro:</p> <ul style="list-style-type: none"> • Make sure the batteries are not dead. Batteries should have at least 1 volt per cell. • The memory may be full. Read out the logger and relaunch. • The logger may not have been launched.

Problem	Solution
Individual modules or sensors are not found, or are missing in HOBOWare Pro's Launch Logger dialog	<p>If a FlexSmart module or Smart Sensor is removed and then immediately reconnected, it may not be detected, and therefore will not appear on the Launch Logger dialog. Click the Refresh button on the Launch Logger dialog.</p> <p>Check for a loose connection between the module or sensor and the logger.</p> <p>Make sure you have not exceeded 100 meters (328 ft) of network cable for all Smart Sensors.</p>
No modules or sensors appear in HOBOWare Pro's Launch Logger dialog	Remove all modules and sensors except one, click Refresh , and see if the module or sensor appears on the Launch Logger dialog. Continue to remove and reconnect modules and sensors one at a time until you identify the culprit. If you find the bad module or sensor, or if none of the modules or sensors communicate, contact your Onset Authorized Dealer or Onset Technical Support.
Batteries die prematurely	<p>Check for excessive moisture or contamination in the logger enclosure. Severe and/or repeated condensation in the logger enclosure can lead to short circuits and battery failure. It may be necessary to place the logger in an additional weatherproof case with desiccant inside the enclosure to prevent condensation.</p> <p>Make sure that both the logging and sampling intervals are set for at least one minute or greater. Fast sampling and logging intervals (shorter than one minute) will rapidly deplete the battery. For more information, refer to "Maximizing battery life" on p. 24.</p> <p>Check for damaged wiring and malfunctioning modules and sensors. Damaged cables or connectors can result in complete or partial short circuits that will rapidly drain batteries.</p>

Problem	Solution
Datafile contains errors	If you are missing data for a particular module or sensor, check that it was properly installed and configured. Remove and reconnect the module or sensor, and check the status in HOBOWare Pro to verify that it can report accurate readings. If you find that it is not communicating, it may be damaged. Contact your Onset Authorized Dealer or Onset Technical Support.
Excitation power stops working	The batteries have dwindled to 6.8 V while excitation was in use. The batteries are nearly dead and must be changed.
Datafile cannot be opened	In rare circumstances, the datafile may have become corrupted. Read out the logger again and try opening the file again. If that does not work, contact your Onset Authorized Dealer or Onset Technical Support.
Logger is not found	<p>Check and replace the batteries, and reconnect the logger.</p> <p>Check communication cable connections.</p> <p>Review the Communication preferences in HOBOWare Pro.</p> <p>Check the computer's COM port/USB settings.</p>


Chapter 7: Reference

This chapter discusses the following reference topics:

- ✍ Detailed specifications
- ✍ Accessories
- ✍ Warranty
- ✍ Returns
- ✍ Repair Policy
- ✍ Contacting Technical Support

Detailed specifications

Operating range	-20° to 50°C (-4° to 122°F) with alkaline batteries -40° to 60°C (-40° to 140°F) with lithium batteries
Sensor inputs	Three FlexSmart multi-channel modules and up to 6 Smart Sensors (which may have multiple parameters/channels)
Sensor connectors	Six RJ-12 Smart Sensor jacks plus 3 FlexSmart module slots
Communication	RS-232 via 3.5 mm serial port or/and 9-pin D-Sub connector
Dimensions	15.6 cm x 8.4 cm x 4.6 cm (6.13" x 3.31" x 1.81")
Weight	435 g (15.23 oz) with batteries 238 g (8.33 oz) without batteries
Memory	512K nonvolatile flash data storage
Memory modes	Stop when full; wrap when full
Operational indicators	Six indicators provide logging and sensor network status

Logging interval	One second to 18 hours, user-specified interval (2-second minimum for two-channel S-FS-TRMSA operation)
Sensor excitation	12 V DC at 200 mA total, with user-programmable warmup time on a per-channel basis
Battery life	One year typical use (up to 75 mA excitation with 10-minute or longer logging Interval and 1-second warmup time)
Battery type	Eight standard AA alkaline batteries included (for operating conditions -20°C/-4°F to 50°C/122°F); optional AA lithium batteries available for operating conditions of -40° to 60°C (-40° to 140°F).
External power	Supports optional 13.6 V DC regulated AC Wall Adapter Connector. Internal batteries may remain installed. Alternatively, an automotive battery or 9-12 V DC regulated Wall Adapter may be used, but it is recommended to remove the internal batteries since they will discharge to the level of the external supply.
Time accuracy	0 to 2 seconds for the first data point and ±5 seconds per week at 25°C (77°F)
Logging mode	Immediate, timed delay, or trigger (button-push) start options; supports sampling intervals for some sensors
Data communication	Current readings while logging; read out while logging; read out when stopped
	This product meets CE specification EN61326 criterion C for ESD, criterion C for Radiated Immunity, criterion B for Fast Transient, criterion A for Conducted Immunity, and criterion A for Power Frequency Magnetic Fields. To minimize measurement errors due to ambient RF, use the shortest possible probe sensor cable length.

Accessories

The following accessories can be used with the HOBO Energy Logger Pro. These accessories can be purchased from an Onset Authorized Dealer, or directly from Onset Computer Corporation.

For detailed information on these accessories, including new items that may have been introduced after this manual was printed, refer to the Onset website: <http://www.onsetcomp.com/solutions/products/energy>

Accessory & Onset part #	Description
USB Serial Adapter CABLE-USB232	Allows you to connect the logger to a USB port on your computer. Requires Serial Interface Cable (CABLE-PC-3.5).
Energy Logger Pro Feet A-H22-MOUNT-1	Allows you to securely mount the logger to a panel or other surface. Includes screws.
Energy Logger Pro Mounting Kit A-H22-DINMOUNT-1	Allows you to mount the logger to industry-standard 32 mm and 35 mm DIN rails.
Energy Logger Pro Spares Kit A-H22-SPARES	Spare bumpers, screwdriver, and FlexSmart module connector covers.
FlexSmart Analog Module Spares Kit A-FS-CVIA-7P	Four 7-pin screw terminals and screwdriver; lets you leave a sensor attached to screw terminal for later connection to module.
FlexSmart TRMS Module Spares Kit A-FS-TRMSA-4P	Four 4-pin screw terminals and screwdriver; lets you leave a sensor attached to screw terminal for later connection to module.
Energy Logger Pro AC Power Adapter P-AC-1	Allows you to power the logger using AC power, rather than batteries. (100 to 240 VAC, 50 or 60 Hz input.)

Warranty

As part of Onset's ongoing efforts to provide 100% customer satisfaction, our Continuing Engineering Group constantly monitors and evaluates all of our products and software. In the unlikely event any significant defect is found, Onset will notify you. If you find a defect, please e-mail us at loggerhelp@onsetcomp.com.

Onset Computer Corporation ("Onset") warrants to the original end-user Purchaser for a period of **one year** from the date of original purchase that the HOB0 product(s) purchased will be free from defect in material and workmanship. During the warranty period Onset will, at its option, either repair or replace products that prove to be defective in material or workmanship. This warranty is void if the product has been damaged by the Purchaser as a result of improper maintenance, abuse, misuse, mishandling, misapplication, error or negligence of Purchaser, or if there has been an unauthorized alteration, attachment or modification.

THERE ARE NO WARRANTIES BEYOND THE EXPRESSED WARRANTY AS PROVIDED IN THIS DOCUMENT. IN NO EVENT SHALL ONSET BE LIABLE FOR LOSS OF PROFITS OR INDIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL OR OTHER SIMILAR DAMAGES ARISING OUT OF ANY BREACH OF THIS CONTRACT OR OBLIGATIONS UNDER THIS CONTRACT, INCLUDING BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY.

LIMITATION OF LIABILITY. The Purchaser's sole remedy and the limit of Onset's liability for any loss whatsoever shall not exceed the Purchaser's price of the product(s). The determination of suitability of products to the specific needs of the Purchaser is solely the Purchaser's responsibility.

THERE ARE NO WARRANTIES BEYOND THE EXPRESSED WARRANTY IN THIS DOCUMENT. EXCEPT AS SPECIFICALLY PROVIDED IN THIS DOCUMENT, THERE ARE NO OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NO INFORMATION OR ADVICE GIVEN BY ONSET, ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THE EXPRESSED WARRANTY OFFERED WITH THE SALE OF THIS PRODUCT.

INDEMNIFICATION. Products supplied by Onset are not designed, intended, or authorized for use as components intended for surgical implant or ingestion into the body or other applications involving life-support, or for any application in which the failure of the Onset-supplied product could create or contribute to a situation where personal injury or death may occur. Products supplied by Onset are not designed, intended, or authorized for use in or with any nuclear installation or activity. Products supplied by Onset are not designed, intended, or authorized for use in any aeronautical or related application. Should any Onset supplied product or equipment be used in any application involving surgical implant or ingestion, life-support, or where failure of the product could lead to personal injury or death, or should any Onset-supplied product or equipment be used in or with any nuclear installation or activity, or in or with any aeronautical or related application or activity, Purchaser will indemnify Onset and hold Onset harmless from any liability or damage whatsoever arising out of the use of the product and/or equipment in such manner.

LEGAL REMEDIES. This warranty gives you specific legal rights. You may also have other rights which vary by jurisdiction. The remedies provided herein are in lieu of all other remedies, express or implied.

Returns

Please direct all warranty claims to the place of purchase. Before returning a failed unit directly to Onset, you must obtain a Return Merchandise Authorization (RMA) number from Onset. You must provide proof that you purchased the Onset product(s) directly from Onset (purchase order number or Onset invoice number). Onset will issue an RMA number that is valid for 30 days. You must ship the product(s), properly packaged against further damage, to Onset (at your expense) with the RMA number marked clearly on the outside of the package. Onset is not responsible for any package that is returned without a valid RMA number or for the loss of the package by any shipping company. Loggers must be clean before they are sent back to Onset or they may be returned to you.

Note: For third-party sensors, Onset is acting as a distributor; manufacturer's warranty and repair/replacement information, if any, is in documentation provided with the sensors.

Repair Policy

Products that are returned after the warranty period or are damaged by the customer as specified in the warranty provisions can be returned to Onset with a valid RMA number for evaluation. Contact Onset for details and pricing.

Data-Back Service

HOB0 Energy Logger Pros store data in non-volatile flash data storage. Onset will, if possible, recover your data to disk.

Tune Up Service

Onset will examine and retest any logger, FlexSmart module, or sensor.

ASAP Repair Policy

For an additional charge, Onset will expedite the repair of a returned product.

Contacting Technical Support

If you have questions about the HOB0 Energy Logger Pro, contact the company where you purchased it (either Onset Computer Corporation or an Onset Authorized Dealer). Contact information for Onset Computer Corporation is located at the end of this chapter.

Before calling Technical Support

You can evaluate and often solve the problem yourself by taking the following steps:

- Check the “Diagnostics and troubleshooting” chapter of this guide and online technical support at www.onsetcomp.com or www.hobohelp.com. Common problems and solutions are listed in those locations.
- Write down the events that led to the problem.
- If you contact Technical Support at Onset Computer Corporation or an Onset Authorized Dealer, please indicate that you need technical support for HOB0 products. Be prepared to provide the following information:
 - A datafile showing any anomalies. *This is the most important information you need to provide.*

- The part number and serial number of the logger, modules, and sensors used, and the configuration being used.
- The software version number.
- Details on the hardware and software configuration of your computer, including the manufacturer, model number, peripherals, and operating system version.
- A description of the environment in which the logger and sensors are deployed.
- A complete description of the problem or question.

With this detailed information, Technical Support can provide a faster and more accurate response.

Index

A

Analog module, 7, 13, 16, 26–28, 35, 43

B

Batteries, 7, 13, 14, 21–24, 42; dead, 15, 20, 35, 39; indicator, 37; installing, 11; replacing, 33
Battery channel, 12, 13, 17, 18, 20, 34

D

Delayed/interval start, 13, 17, 36, 37, 42

E

Excitation, 7, 13, 16–17, 21, 22, 26, 27, 35, 40, 42
External power source, 7, 9, 11, 17, 25, 37, 42, 43

F

FlexSmart modules, 11, 12, 13, 18, 41; analog, 7, 13, 16, 26–28, 35, 43; TRMS, 8, 29–31, 35, 42, 43

I

Indicators (LEDs), 14, 18, 28, 31, 36–38, 38, 41

L

Logging interval, 16, 18, 20, 23, 28, 31, 35, 39, 42

M

Measurement averaging. *See* Sampling interval
Memory, 14, 15, 20, 38, 41; wrapping, 13, 14, 37

P

Power adapter, power supply. *see* External power source

S

Sampling interval, 13, 23, 24, 39, 42
Sensor excitation. *See* Excitation
Sensors, 38, 39, 41; adding and removing, 17; FlexSmart, 7, 8, 12, 13, 18, 27, 30, 36; Smart, 6, 7, 8, 12, 13, 18, 24, 33, 36
Smart Sensors, 6, 7, 8, 12, 13, 18, 24, 33, 36, 41; cable lengths, 39; cable lengths, 18

T

Trigger (button) start, 9, 13, 17, 36, 37, 42
TRMS module, 8, 29–31, 35, 42, 43

W

Warmup, 16, 22, 23, 24, 35, 42
Wrap, 13, 14, 37, 41